
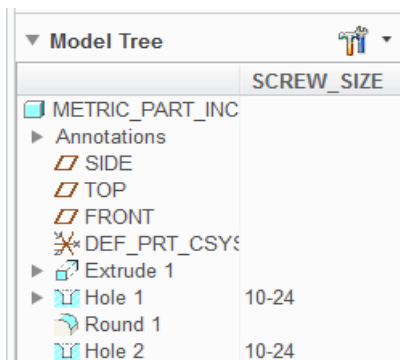
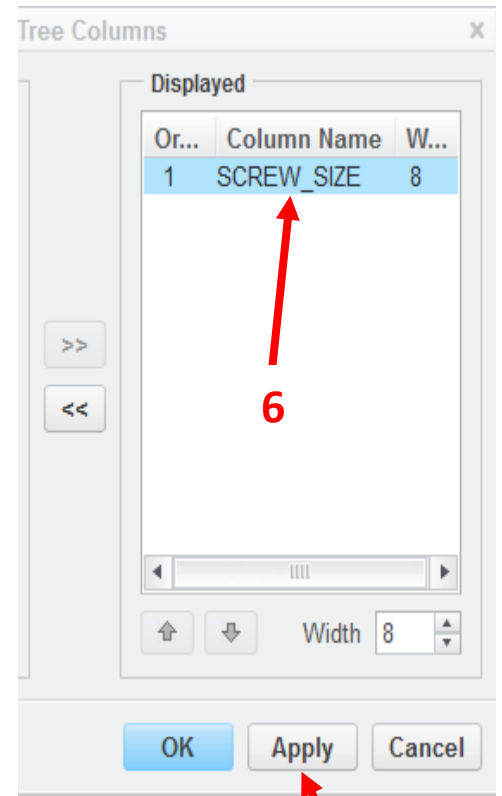
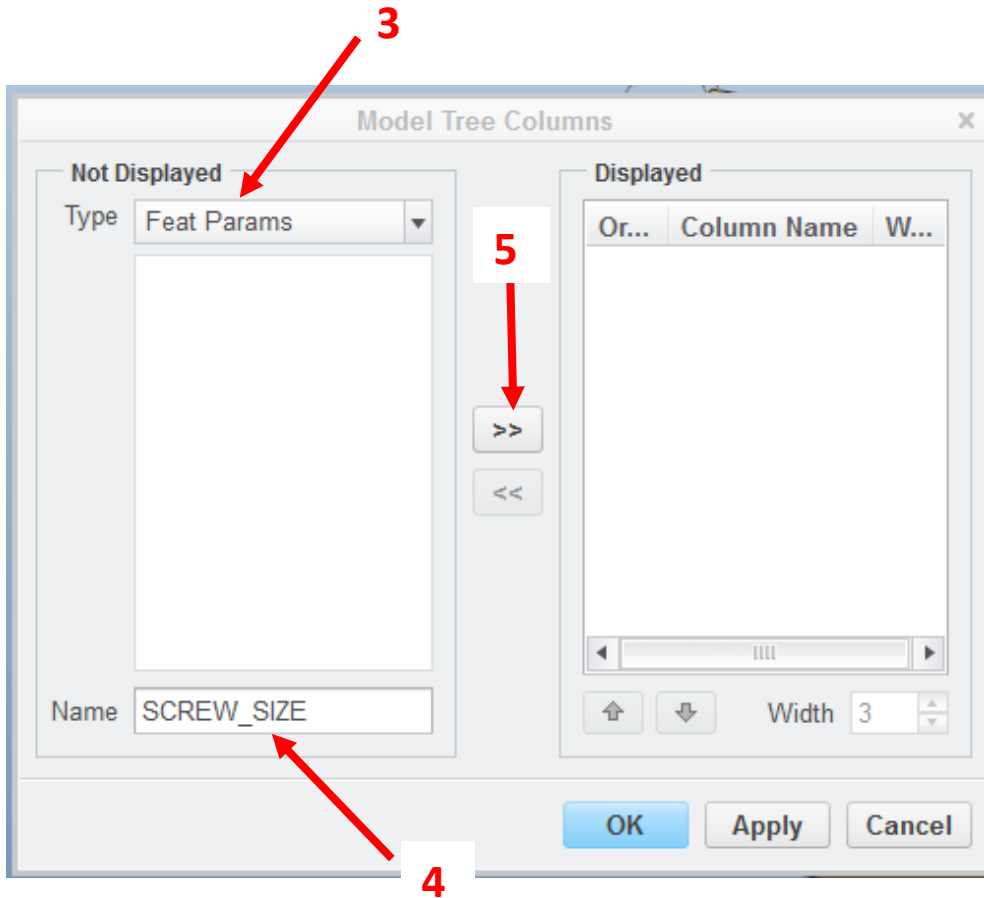
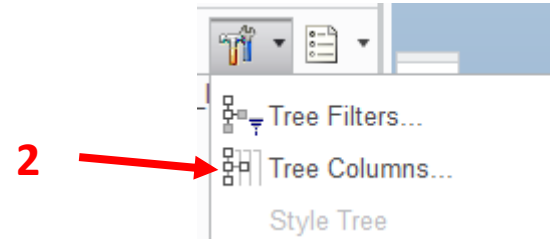


Screw size in model tree

1. In the model tree columns select the display options dialog icon.
2. Select Tree Columns
3. In the type drop down box selected Feat Params
4. In the name edit box type in SCREW_SIZE
5. Clicked on the >> button to add it as a Displayed column
6. Make sure it shows up
7. Apply, Ok

For any tapped hole in the part it shows what size screw it is.

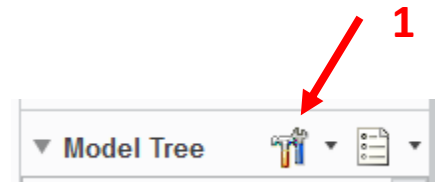

The Column Name, SCREW_SIZE, will not be saved anywhere.

So if you push it back over << it's gone.